



Features

Novibra® type SAW mountings consist of a cylindrical shaped rubber section with integrally bonded interleaf metal plates bonded to two square heavy duty outer metal fixing plates. Designed for large compressive forces with minimum deformation, while providing low shear stiffness rates.

The combination of a stable low installation height, high compressive strength and low shear stiffness makes Novibra® type SAW a versatile high performance antivibration mounting. Ease of installation due to 4 clearance holes in each fixing plate.




Novibra® type SAW

Novibra® elements type SAW are heavy duty mountings for static and shock loads in compression. Provides high isolation in the horizontal shear direction.

Typical fields of application are:


- Crushers
- Edge runners
- Mills
- Hoppers and feeders
- Grinders
- Vibratory rollers
- Screens
- Other very heavy machines and equipment

By connecting 2 SAW-elements in series, i.e. one on top of the other, an increased isolation efficiency is achieved in both shear and compression planes. Where larger deflections are required in the vertical plane, Novibra® type SAW mountings are mounted at a calculated angle configuration to provide the optimum spring rate.

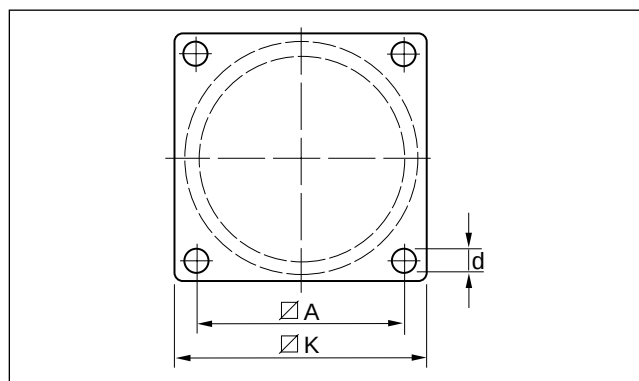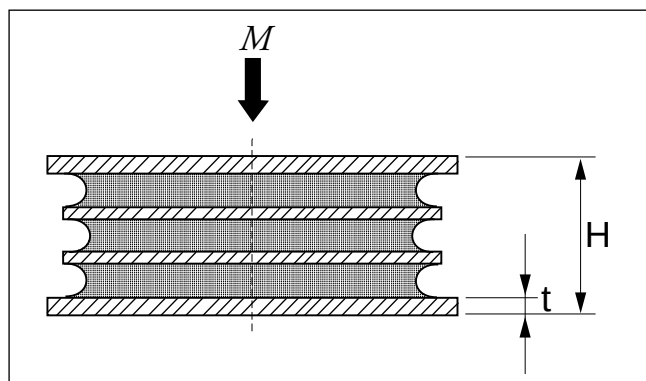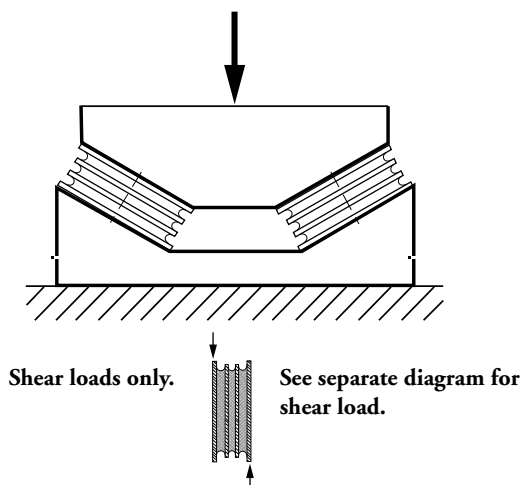

Type	Art.No.		Dimensions in mm					Weight (kg)	M-Max(kg)	
	40° IRH	60° IRH	A	K	H	d	t		40° IRH	60° IRH
SAW 125	2255130	2255140	118	148	52	13.5	5	2.6	2250	4500
SAW 150	2255150	2255160	136	166	63	13.5	6	4.1	3750	7500
SAW 200	814467	814475	184	220	82	17.0	8	9.2	6000	12000
SAW 300	814483	814491	270	310	120	22.0	10	27.0	15000	30000

Note: The natural frequencies and degrees of isolation are based on dynamic characteristics of the mountings.



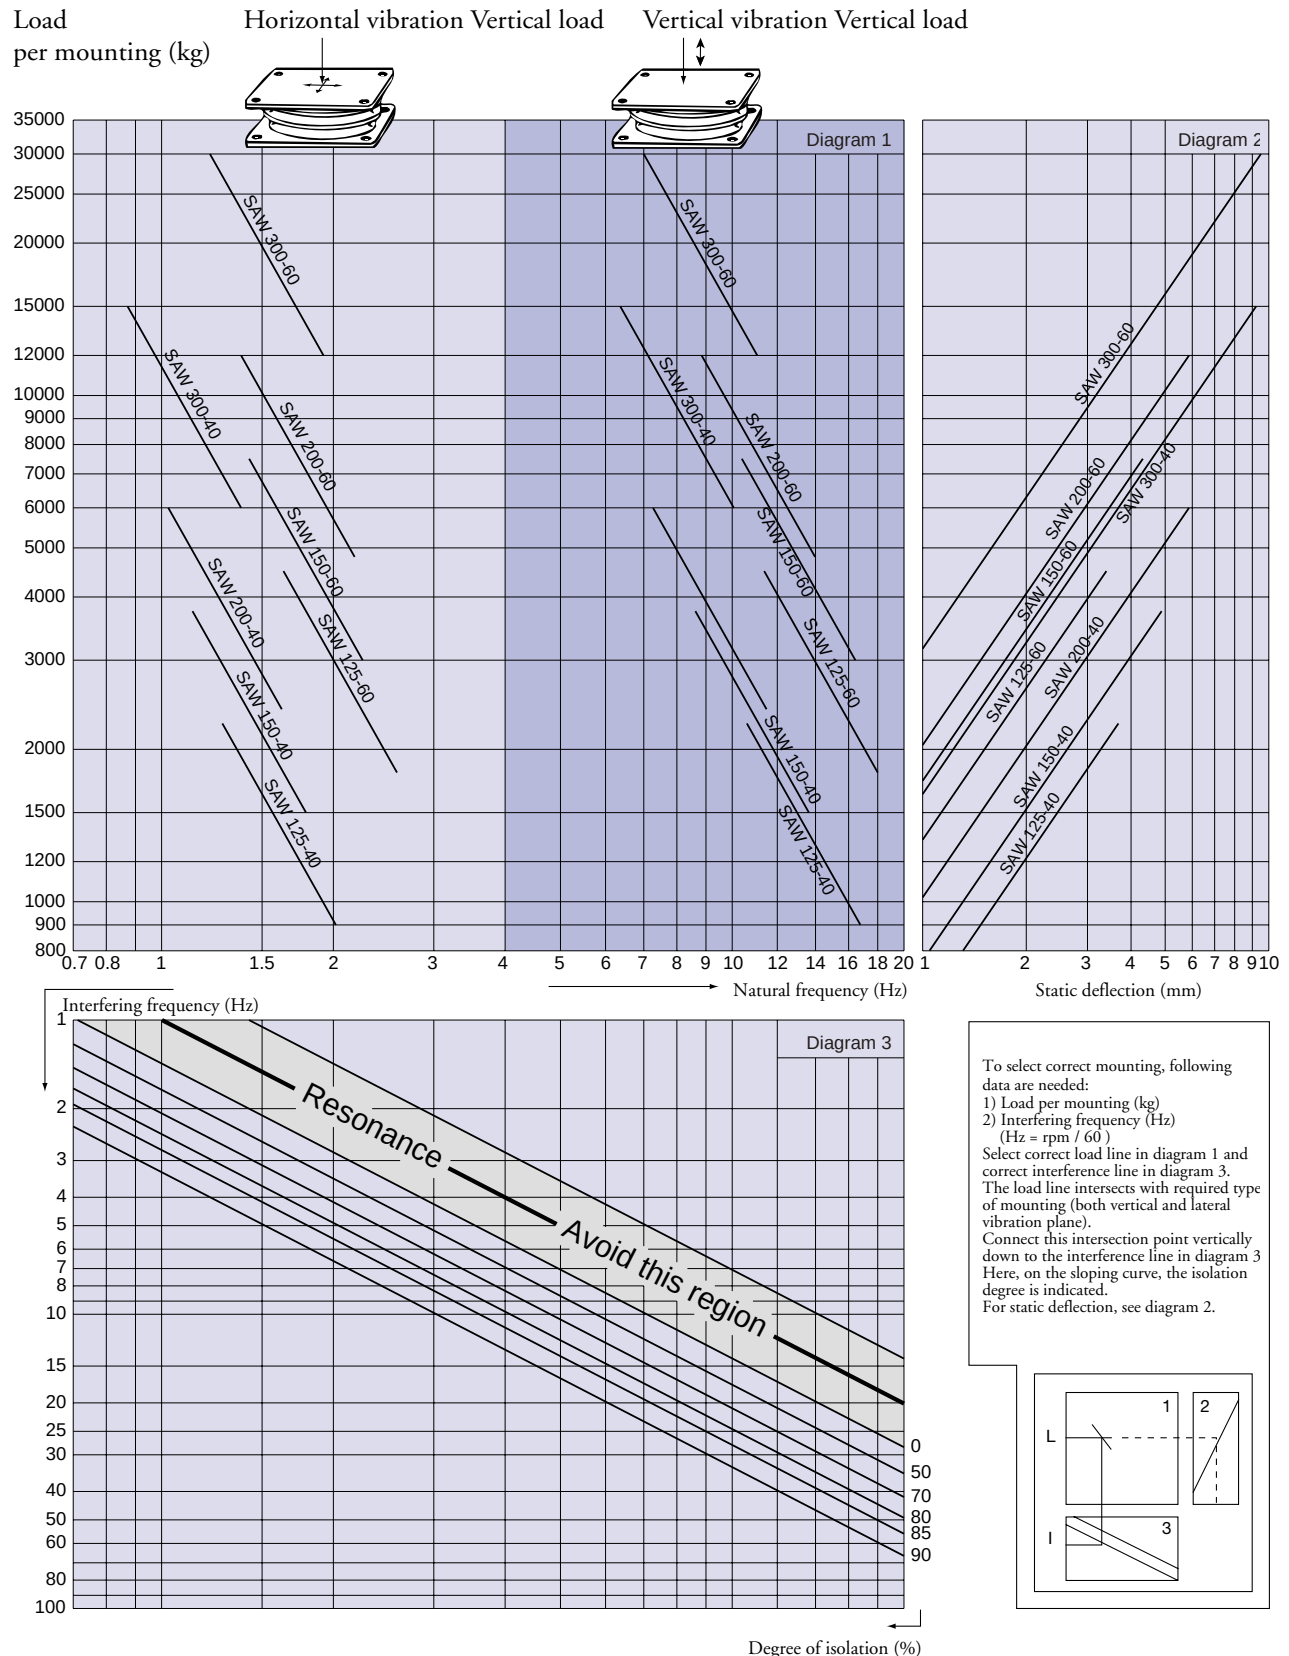


Note: The natural frequencies and degrees of isolation are based on dynamic characteristics of the mountings.

This page refers to shear load characteristics only!

F max (kg)	40° IRH	60° IRH
SAW 125	240	570
SAW 150	330	850
SAW 200	600	1200
SAW 300	1575	3150

Load per mounting (kg)

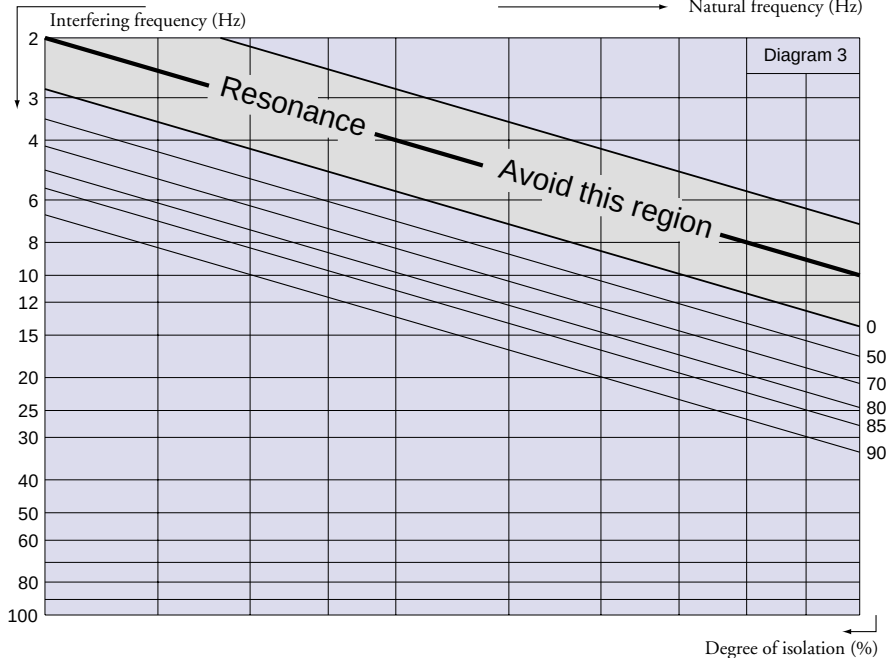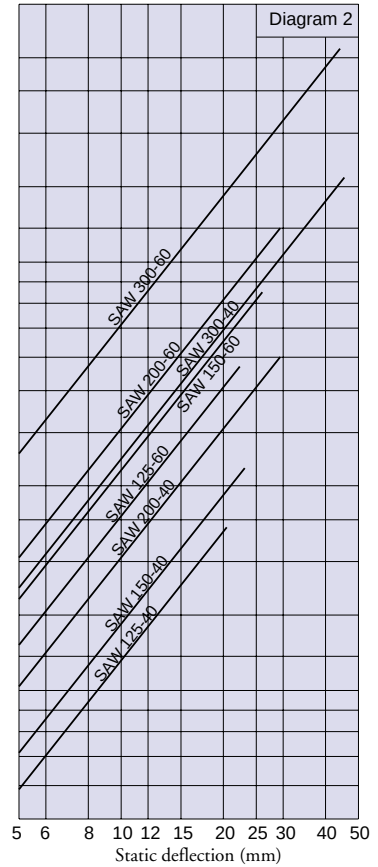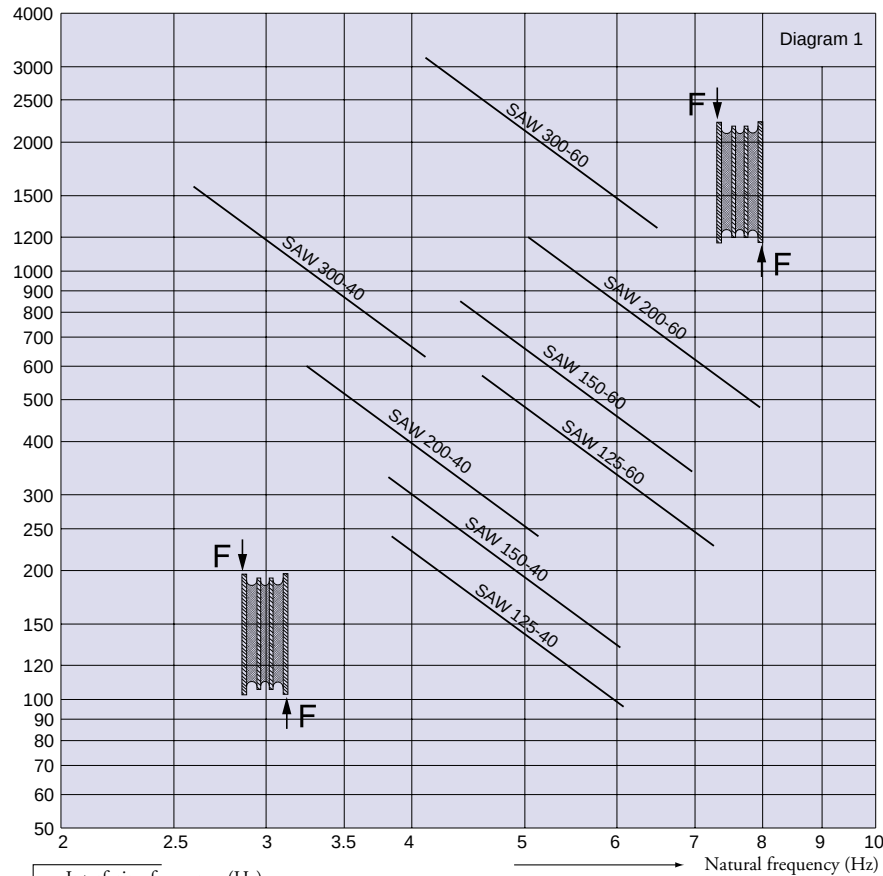

To select correct mounting, following data are needed:
 1) Load per mounting (kg)
 2) Interfering frequency (Hz)
 (Hz = rpm / 60)
 Select correct load line in diagram 1 and correct interference line in diagram 3. The load line intersects with required type of mounting (both vertical and lateral vibration plane). Connect this intersection point vertically down to the interference line in diagram 3. Here, on the sloping curve, the isolation degree is indicated.
 For static deflection, see diagram 2.

